

“No Hassle” EagleTac Warranty

For repair, replacement, or other inquiries contact your EagleTac dealer. You can also reach our customer support via email at support@eagletac.com.

We warrant our flashlights to be free from defects in workmanship and materials. We will repair, replace at our option, without charging any product or part which is found to be defective under normal use within 120 months from the date of purchase with the proof of purchase.

Electronics, chargers and rechargeable batteries are covered for a period of 12 months with purchase receipt. Such repair or replacement shall be the purchaser’s sole and exclusive remedy under this warranty. Normal wear and tear including batteries draining is not covered, nor is damage resulting from modification, misuse, abuse, neglect, battery leakage, improper maintenance or repaired by anyone other than EagleTac.

Instruction Manual

D25 models

D series - Clicky



High Performance Tactical Flashlights
<http://www.eagletac.com>

D25 clicky - Quick Specifications

	D25A	D25A2
MAX O.T.F. lumen	110/122*	220/278*
Runtime	1.3 - 150 hrs	1.4 - 200+ hrs
Battery Types	1xAA	2xAA
Voltage	0.9V-1.5V & li-ion**	1.8V-3.2V

	D25C	D25C2/D25LC2
MAX O.T.F. lumen	219/277*	343/548*
Runtime	0.9 -150+ hrs	1 - 100+ hrs
Battery Types	1xCR123A	2xCR123A/18650***
Voltage	1.8V-3.2V & li-ion**	2.7V-9V

*Out-the-front lumen for CREE XP-G S2 / CREE XM-L U2 respectively
(P25A/P25C) When using single protected 3.7V rechargeable li-ion, medium brightness level will become turbo output. *D25LC2 only

Caution when using Li-ion in D25A & C

Using 3.7V li-ion direct drives the LED at maximum current level. Limit each usage to less than five minutes (or less than one minute each with freshly charged li-ion for the first couple times). Hold the light in your palm to help removing heat from the LED faster. If you find the flashlight too warm to hold, turn off the light to allow the light to cool down. Do not leave the light running unintended.

Battery Safety Precaution

WARNING - All batteries (especially lithium and Li-ion cells) can explode or cause burns if disassembled, shorted, or exposed to high temperature. Do not mix new and used cells or different battery types/voltage, or install battery backwards.

WARNING - Some NiMH rechargeable cells may release gas during discharge. If you experienced high pressure being built inside the light, switch off the flashlight immediately and release the pressure gently. Replace batteries if necessary.

EagleTac flashlights use “button-top” battery (battery with protruding positive). For rechargeable li-ion battery, use only EagleTac li-ion battery to ensure safety, high performance, and good battery fitment. Always ensure the battery outer wrapping is complete to prevent short circuit. When the light output starts to dim, replace batteries and do not drain the batteries completely, especially when using two (or more) batteries setup.

D25 Clicky Series Quick Start

Thank you for purchasing EagleTac D25 clicky series LED flashlight.

1) Unscrew the tailcap and insert new batteries with positive terminals facing the front. Replace tailcap and tighten snugly.



Basic Operation

1) Press on the switch button until it clicks to turn on the flashlight. To switch off the light, press the switch again until it clicks.



2) With the flashlight on, tight the head to access group 2 output. Loose the head to access group 1 output.



3) Switching between modes
With the flashlight on, slightly press the switch and release (within 1.5s) to switch to the next output.

Group 1 (w/ head loosen):

Low ➔ Med ➔ High ➔ Low ➔ Med ➔ High
➔ Strobe (I/II) ➔ S.O.S.(I/II) ➔ Beacon ➔
Low-Flash (cycle)

Group 2 (w/ head tighten):

Turbo ➔ Strobe (cycle)

The EagleTac turbo boost technology is activated everytime you turn on at turbo output setting. It offers 20% more power to the LED for the first 90 seconds. It's normal for the light to get warm at this level.

Programmable Features

1) Moonlight output - dim or increase the entire output range of the group 1 output. Toggle this setting starting with head loosen, turn on the light, and then repeat tight and loose for three times.

2) mode memory* - remembers the last output in group 1. To toggle this setting, with head tighten, turn on the light, and repeat loose and tight for three times.

* This feature does not apply for D25A clicky model

Carrying Method

Use the stainless steel pocket clip to hold the light securely at your pocket. Use our optional M1.5 hex key to remove the screws that hold the clip. Our hex key is custom made to prevent screw stripping.

Attach the stainless steel split ring to the back of the light to use with the para-cord lanyard.

(D25A2/D25C2/D25LC2) Reverse the body to change the clip orientation.



Fasten the pocket clip holding ring (see arrow above) securely, to ensure proper functionality.

Maintenance

Periodically clean the threads and o-rings with a lint free cloth and apply a thin coating of EagleTac synthetic grease to the o-rings and threads shown below.



After prolonged exposure to moisture, the head and batteries should be removed, inspected, and dried.

Do not touch or attempt to clean the reflector, as it will damage the reflective coating permanently.